#### PROJECT TYPE:

# XMB-PM


# **FEATURES**


Durable corrosion resistant, cast aluminum construction.

#### **Finish**

Electrostatically applied TGIC Polyester Powder Coat on substrate prepared with 20 PSI power wash at 140°F. Four step media blast and iron phosphate pretreatment for protection and paint adhesion. 400°F bake for maximum hardness and durability.




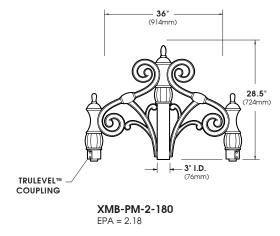


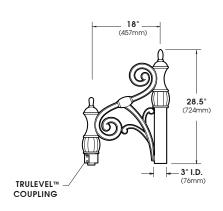

XMB-PM-1 EPA = 1.34

SCALE: 1/2"=1'

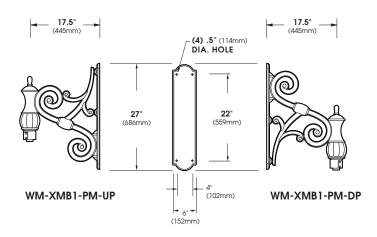


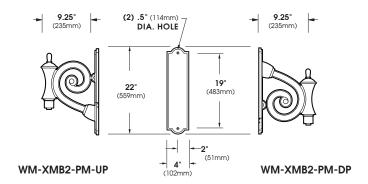

SCALE: 1/2"=1'

### **ORDERING INFORMATION**

## Spec/Order Example: XMB-PM-DN-2-180/RAL-6005-S

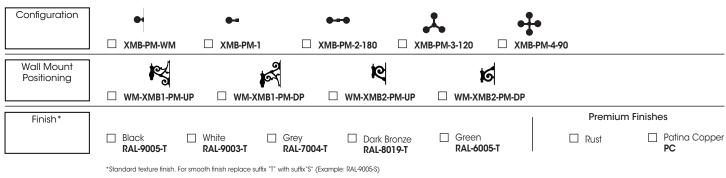


Consult factory for custom colors






#### **SPECIFICATIONS**


# Trulevel System® Assembly

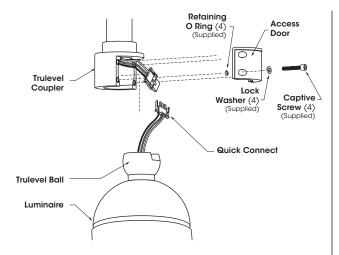

Loosen (4) Captive Screws and remove Access Door from Trulevel Coupler, pull out Quick Connect from Trulevel Coupler and Trulevel Ball.

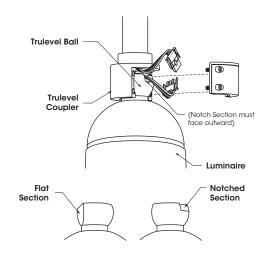


- 2. Place Trulevel Ball inside of Trulevel Coupler as illustrated.
  - A Notched Section of Trulevel Ball must face outward as illustrated.
  - B Flat Section of Trulevel Ball must face inward.

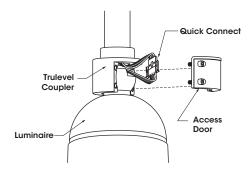

3. Connect Quick Connect components, push components inside of Trulevel Coupler cavity, replace Access Door and loosely secure, do not tighten.

Fixture will suspend without Access Door during installation.

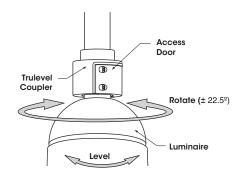

4. Rotate (left to right  $\pm$  22.5°) and level Luminaire to desired position. Tighten

(Tighten each bolt to recommended torque: 10 ft-lb, foot-pound)

Trulevel Pendant Mount is intended to allow for fixture leveling, but is not intended to be "free-swinging" upon proper installation.



